

USER'S GUIDE

BEFORE PLACING AN ORDER


Ensure correct opening specification before placing an Order i.e. either you require a Left Open Door or Right Open Door. Open Space should be perfectly Right Angled, cutted with Circular Machine, giving better grip to the Door Frame.

DURING STORAGE (FOR DEALERS/STOCKISTS)

Place the Doors vertically under covered Shelter at your site or in godown.
Replace the wrappers immediately, if it becomes wet.

AT THE TIME OF INSTALLATION

The Door should be installed only after the Flooring Work is completed.

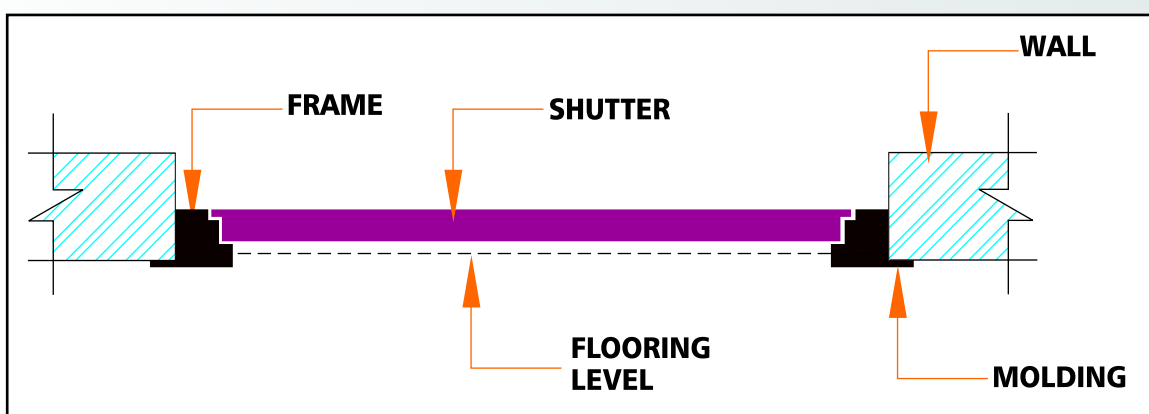

The Open Space should be in between 15 mm to 20 mm more both in terms of Length & Width than the Door Frame Size Ordered.

For Example if the space left is 2125 mm x 1065 mm than the Door Frame to be fitted in that Open Space, its Size should be 2110 mm x 1050 mm.

Frames should be Fastened using the 3 inch long Fastener whose diameter is 12 mm already provided along with the Door to the adjacent structure to retain its position and stability. Use 12 mm drill bit to create necessary holes in the wall. Fill the Frame gap of 4 inch with Cement Slurry for a strong grip with the adjacent wall.

The gaps between Frame and the adjacent walls, if any, should be filled with the Silicone Sealants.

Remove the Protection Film from the Door Surface at the end when your home is completely ready for Grahpravesh.

AFTER INSTALLATION

REGULAR CLEANING: Remove the dirt using a mild liquid soap & a soft cotton cloth for cleaning its surface. You can also use wax polish used in automobiles to give better luster.

MAINTENANCE: Use Lubricant Oil at least quarterly once around the Seven Locking Points and around the Hinges to keep it free. Keep check on the Handle LED and replace its battery if it glow dims.

STANDARD SPECIFICATIONS

Door Leaf Width	: 890 mm & 960 mm
Door Leaf Height	: 2030 mm
Door Frame Width	: 960 mm & 1050 mm
Door Frame Height	: 2110mm
Door Thickness	: 50mm
Opening Direction	: Left Open & Right Open, inward